



# TABLE OF CONTENTS

1. Before You Begin	3
What Is Included	3
Unpacking Instructions	3
Claims	3
Text Conventions	3
Symbols	3
Disclaimer	3
Product at a Glance	4
Safety Notes	4
2. Introduction	5
Overview	5
Dimensions	
3. Setup	
AC Power	
Fuse Replacement	
Mounting	
Orientation	8
Rigging	8
4. Operation	9
Remote or Manual Operation	9
Manual Fog Controller (FC-M)	9
Fluid Tank Indicator LED	9
5. Technical Information	10
Fogger Maintenance	10
Storage	10
6. General Troubleshooting	11
7. Technical Specifications	12
Returns	
RMA	
Contact Us	14

## 1. Before You Begin

Included i

What Is · Hurricane™ 1101

Manual Fog Controller (FC-M)

Hanging Bracket with Mounting

Hardware

Warranty Card

Quick Reference Guide

# Instructions

Unpacking Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

Claims If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

> For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

### **Text** Conventions

Convention	Meaning		
1—512 A range of values			
50/60	A set of values		
Settings	A menu option		
Menu > Settings  A sequence of menu options			
<enter></enter>	A button		

### **Symbols**

;	Symbol	Symbol Meaning			
_	$\stackrel{\bullet}{\mathbb{A}}$	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.			
•	$\mathbf{i}$	Important installation or configuration information. The product may not function correctly if this information is not used.			
-		Useful information.			

**Disclaimer** The information and specifications contained in this User Manual are subject to change without notice. Chauvet assumes no responsibility or liability for any errors or omissions, and reserves the right to revise or recreate this manual at any time. Download the latest version from www.chauvetlighting.com.

### © Copyright 2014 Chauvet. All rights reserved.

Electronically published by Chauvet in the United States of America.

Author	Date	Editor	Date
M. Trouard	M. Trouard 06/23/2014		10/23/14

### Product at a Glance

Use on Dimmer	×	Auto Programs	×
Outdoor Use	×	Fixed voltage (120 V or 230 V)	Р
Sound-Activated	×	Replaceable Fuse	Р
DMX	×	User-Serviceable	×
Master/Slave	×	Duty Cycle	X

Safety Notes These notes include important information about the mounting, usage, and maintenance of this product; read before using the product.

- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Make sure the power cord is not crimped or damaged.
- Never disconnect the product from power by pulling or tugging on the cord.
- If mounting the product overhead, always secure to a fastening device using a safety cable.
- Make sure there are no flammable materials close to the product when operating.



- Do not touch the product's housing when operating because it may be very hot.
- Do not mount the product on a flammable surface (linoleum, carpet, wood, paper, carton, plastic, etc.).
- The product's nozzle is very hot during operation and it remains hot for a long time after operation has stopped.
- The fog exits the nozzle at a very high temperature. Keep a minimum distance of 6.5 ft (2 m) from the nozzle to the nearest object.
- Do not use the product as a space heater.
- Do not drink or come in contact with the fog fluid. If you do, call your local emergency service (911 in the US) for help.
- Do not add perfume, alcohol, gasoline, or any other flammables to the fog fluid.
- Always make sure that the voltage of the outlet to which you are connecting the product is within the range stated on the decal or rear panel of the product.
- The product is for indoor use only! (IP20) To prevent risk of fire or shock, do not expose the product to rain or moisture.
- Always install the product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the product's housing are blocked.
- Never connect the product to a dimmer.
- Make sure to replace the fuse with another of the same type and rating.



- Never carry the product from the power cord or any moving part. Always use the hanging/mounting bracket.
- The maximum ambient temperature (Ta) is 104 °F (40 °C). Do not operate the product at higher temperatures.
- In the event of a serious operating problem, stop using the product immediately.
- Never try to repair the product. Repairs carried out by unskilled people can lead to damage or malfunction. Contact the nearest authorized technical assistance center.
- This product is not intended for permanent installation.
- Use only CHAUVET® water-based fog fluid.
- Drain the tank before transporting the product.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.




Keep this User Manual for future use. If you sell the product to another user, be sure to give this document to the next owner.




FCQ (Fog Cleaner Quart) was specifically developed by Chauvet to clean your Hurricane™ 1101. Make sure you use FCQ regularly, no longer than 90 days between cleanings, to increase the life of your fogger.

## 2. Introduction

## Overview

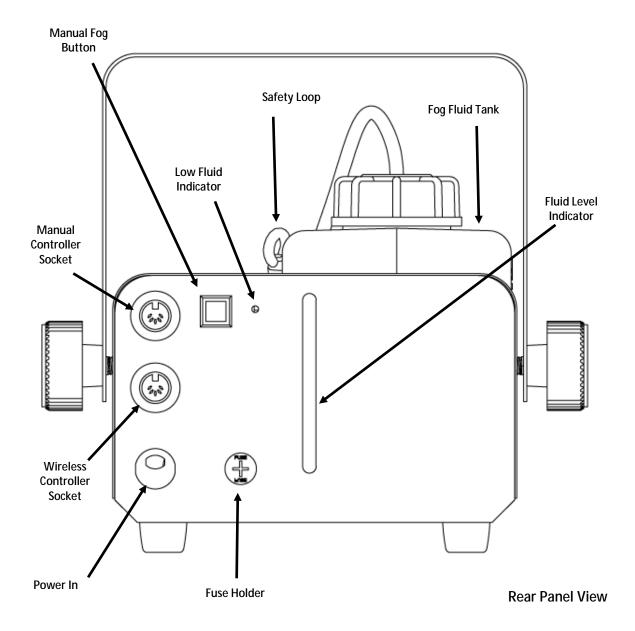

## **Dimensions**

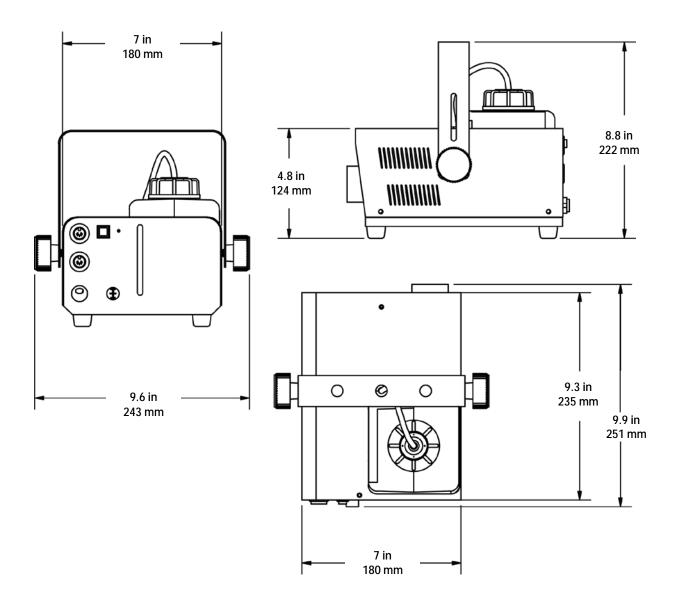

## 3. SETUP

**AC Power** This Hurricane<sup>™</sup> 1101 has a fixed voltage power supply and it can work with an input voltage of either 120 VAC, 60 Hz or 230 VAC, 50 Hz, depending on the specific model.

> To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.



Always connect the product to a protected circuit (circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

## Replacement 2.

- Fuse 1. Disconnect the product from power.
  - With a Phillips #2 head screwdriver, unscrew the fuse holder cap from the housing.
  - 3. Remove the blown fuse.
  - 4. Replace with a fuse of the same type and rating.
  - 5. Screw the fuse holder cap back in place and reconnect power.





Disconnect the product from power before replacing the fuse.



Always replace a blown fuse with another of the same type and rating.

**Mounting** Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes.


### Orientation




This product may not be tilted. This product should only be mounted/used on a level surface.

### Rigging

- Before deciding on a location, always make sure there is easy access to the product for maintenance and fluid replenishment.
- Make sure that the structure or surface onto which you are mounting the product can support the product's weight (see the Technical Specifications).
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, such as an elevated platform or a truss.
- When rigging the product onto a truss, you should use a mounting clamp of appropriate weight capacity. The bracket has 13-mm holes, which are appropriate for this purpose.
- The rubber feet also serve as floor supports and allow for surface mounting. When mounting the product on the floor, make sure that the product and cables are away from people and vehicles.

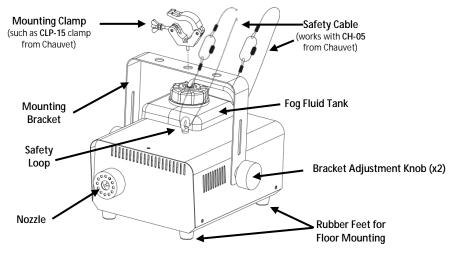

### **Mounting Diagram**

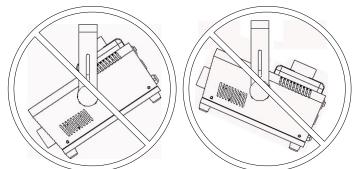



While operating the Hurricane<sup>TM</sup> 1101, make sure there is adequate fog fluid in the machine to prevent pump and heater damage. When the fog fluid level becomes low, as a safety feature, the heat sensor will make a very loud noise. Simply add more fog fluid to continue using the Hurricane™ 1101.

## 4. OPERATION

### Remote or Manual Operation


The Hurricane™ 1101 can be operated manually, or with the included manual fog controller. Two other optional remote controls are also available: a timer remote (FC-T) and a wireless remote (FC-W). The Manual button is located on the rear of the unit. See the product Overview.

### Manual Fog Controller (FC-M)

- 1. Connect the fog machine to power.
- 2. Plug the manual fog controller (FC-M) into the Manual Controller socket on the rear of the fog machine.
- 3. Wait for the Status LED to turn green.
- 4. Press the button located on the controller to trigger the fog output.



The FC-M button is momentary, which means that the fog machine will only output while the button is pressed. Once the button is released, the fog will stop outputting.

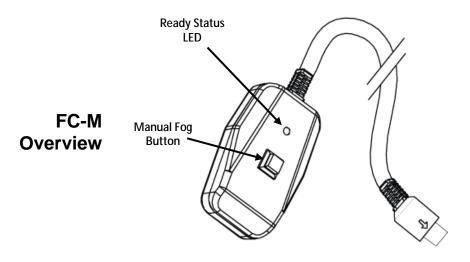



The FC-M has a magnetic back that can affix to most metal surfaces for easy placement while the unit is in use.

# Fluid Tank Indicator Indicator LED follows:

Fluid Tank Indicator LED on the back of the Hurricane™ 1101 shows the status of the fogger, as

Orange - pump is not detecting fluid

Note: The Hurricane™ 1101 may output fog for a short duration to allow for a self-checking cycle.

## 5. TECHNICAL INFORMATION

Fogger Do not allow the fogger to become clogged. After every 40 hours of continuous Maintenance operation, use CHAUVET® Fog Cleaner Quart (FCQ) through the system to prevent the accumulation of particulate matter in the heating element.

The recommended cleaning procedure is as follows.

- 1. Unplug the product from power.
- 2. Empty all fog fluid from the machine.
- 3. Add cleaning solution to the tank.
- 4. Connect the product to power and allow it to warm up.
- 5. Run the unit in a well-ventilated area until the tank is almost empty. Do not allow the pump to run dry.
- Refill with fogger fluid to continue using the fogger. Run the machine briefly to clear any remaining cleaning solution from the pump and heater.



Do Not operate the machine without fluid at any time.



Fog Cleaner Quart (FCQ) was specifically developed by Chauvet to clean your Hurricane™ 1101. Make sure you use FCQ regularly, no longer than 90 days between cleanings, to increase the life of your product.

Storage Before storing the fogger, run FCQ through the system as described in the cleaning procedure above; however, only follow steps 1 through 5. Do not refill the tank with fog fluid if storing the fogger. Cleaning the system prior to storage will help prevent any particles from condensing inside the pump or heater while not in use.



Test-run your Hurricane™ 1101 on a monthly basis to achieve the best performance.

# 6. GENERAL TROUBLESHOOTING

Symptom	Possible Indicator Cause Status		Possible Action	
	Line blockage or air in fluid	Orange	Make sure there is fluid in the tank	
			Turn fog machine 45° to flatten out the bubble and allow the fog fluid to flow properly	
			Prime by setting output to the highest setting	
No output or short output	line		Turn off the product for 5 seconds, and then turn it back on. Repeat as necessary.  Note: After more than 10 attempts, contact Customer Service.	
	Incorrect fluid	Off	Clean thoroughly with CHAUVET® FCQ. For full instructions, see Fogger Maintenance. Refill with CHAUVET® water-based haze fluid.	
No output or spitting fluid	Incorrect fluid	Off	Clean thoroughly with CHAUVET® FCQ. For full instructions, see Fogger Maintenance. Refill with CHAUVET® water-based haze fluid.	
140 output of Spitting hala	Blocked pipes	OII	Contact Customer Service	
	Failing part		Contact Customer Service	
Fuse keeps blowing	Excessive load on the circuit		Make sure that the total load does not exceed 80% of the breaker or fuse nominal current	
ruse keeps blowing	Short circuit along the power lines		Check the power lines and power cords	
	No energy on power outlet		Check power outlet Change to another outlet	
Product does not power	Loose or damaged power cord		Check the power cord	
up	Blown fuse		Replace blown fuse with a good one of the same type and rating	
	Internal problem		Send product for repair	
Product stops pumping/	Low/No Fluid		Refill product with fluid	
Loud noise	Pump protection system engaged		Release manual fog button, and press it again to reset pump protection system	



If you still experience problems after trying the solutions presented here, contact Chauvet Technical Support. See Contact Us.

## 7. TECHNICAL SPECIFICATIONS

ensions and	Length	Width	Height	Weight
Weight	9.9 in (252 mm)	9.6 in (243 mm)	8.8 in (222 mm)	7.4 lb (3.4 kg)
	Note: Dimensions in inches	rounded to the near	est decimal digit.	
Power	Power Supply Type	Ra	ange	Voltage Selection
	Model-specific		C, 60 Hz or AC, 50 Hz	Fixed
	Parameter	120 \	/, 60 Hz	230 V, 50 Hz
	Consumption	61	12 W	716 W
	Operating / Inrush currer	nt 5	.1 A	3.1 A
	Fuse	F 8 A	A, 250 V	F 5 A, 250 V
	Power I/O	US/W	orldwide	UK/Europe
	Power input connector	Hard	d-wired	Hard-wired
	Power Cord plug	Edis	on (US)	Local plug
Operation	Heat-up Time	Tank (	Capacity	Fluid Consumption
	5 min	0.3 g	al (1.3 l)	30 ml/min
Fog Output	Output			
	8,000 cfm			
Thermal	Maximum External Tem	p. Coolin	g System	
	104 °F (40 °C)	Con	vection	
Ordering	Product Name	Item	n Code	Item Number
_	Hurricane <sup>™</sup> 1101 (120 \	/) 050	70794	781462211424
	Hurricane <sup>™</sup> 1101 (230 \	<sup>'</sup> ) 050	70797	781462211455



## **RETURNS**

To return a product or request support:

- In the U.S., contact Chauvet World Headquarters (see Contact Us).
- In the UK or Ireland, contact Chauvet Europe Ltd. (see Contact Us).
- In Mexico, contact Chauvet Mexico (see Contact Us).
- In any other country, DO NOT contact Chauvet. Contact your distributor. See www.chauvetlighting.com for distributors outside the U.S., United Kingdom, Ireland, or Mexico.



If you live outside the U.S., United Kingdom, Ireland, or Mexico, contact your distributor of record and follow their instructions on how to return Chauvet products to them. Visit our website for contact details.

RMA Call the corresponding Chauvet Technical Support office and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause for the

You must send the merchandise prepaid, in its original box, and with its original packing and accessories. Chauvet will not issue call tags.

Clearly label the package with the RMA number. Chauvet will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Before sending the product, clearly write the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).

## CONTACT Us

### WORLD HEADQUARTERS - Chauvet

General Information Technical Support

Address: 5200 NW 108th Avenue Voice: (954) 577-4455 (Press 4)

Sunrise, FL 33351 Fax: (954) 756-8015

Voice: (954) 577-4455 Email: tech@chauvetlighting.com

Fax: (954) 929-5560

Toll free: (800) 762-1084 World Wide Web www.chauvetlighting.com

UNITED KINGDOM AND IRELAND - Chauvet Europe Ltd.

General Information Technical Support

Address: Unit 1C Email: uktech@chauvetlighting.com

Brookhill Road Industrial Estate

Pinxton, Nottingham, UK World Wide Web www.chauvetlighting.co.uk

**NG16 6NT** 

Voice: +44 (0)1773 511115 Fax: +44 (0)1773 511110

**MEXICO** - Chauvet Mexico

General Information Technical Support

Address: Av. Santa Ana 30 Email: <a href="mailto:servicio@chauvet.com.mx">servicio@chauvet.com.mx</a>

Parque Industrial Lerma

Lerma, Mexico C.P. 52000 World Wide Web www.chauvet.com.mx

Voice: +52 (728) 285-5000

Outside the U.S., United Kingdom, Ireland, or Mexico, contact your dealer. Follow their instructions to request support or to return a product. Visit our website for contact details.