 

Data Stream 8

User Manual







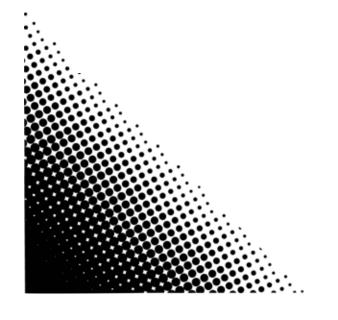

1.	Before You Begin	1
	What Is Included	1
	Unpacking Instructions	1
	Claims	1
	Text Conventions	1
	Symbols	1
	Disclaimer	1
	Product at a Glance	2
	Safety Notes	2
2	Introduction	3
	Product Overview	3
	Product Dimensions	4
2		-
э.	Setup	5
	AC Power	5
	Fuse Replacement	5
	Mounting	6
	Orientation	6
4	Rigging	6
4.	Operation	/
	Front Panel Operation	7
	Configuration	7
	Power Indicator	7
	Signal Indicators	7
	DMX Input Ports	7 7
5	Input Select Switch	-
J.	Maintenance	8
_	Product Maintenance	8
	Technical Specifications	9
7.	Returns	10
_	Contact Us	11



1. BEFORE YOU BEGIN

What Is Included

- Data Stream 8
- Power Cord

- Warranty Card
- · Quick Reference Guide

Unpacking Instructions

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

Claims

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

CONVENTION	MEANING
1–512	A range of values
50/60	A set of values of which only one can be chosen
Settings	A menu option not to be modified
<enter></enter>	A key to be pressed on the product's control panel
ON	A value to be entered or selected

Symbols

SYMBOL	MEANING
A	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.
\triangle	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
(i)	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from www.chauvetdi.com.

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2018 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

CHAUVET, the Chauvet logo, and Data Stream 8 are registered trademarks or trademarks of Chauvet & Sons LLC. (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.




Product at a Glance

Use on Dimmer	\Diamond	Auto Programs	\Diamond
Outdoor Use	0	Auto-ranging Power Supply	~
Sound-Active	0	Replaceable Fuse	~
DMX	~	User-Serviceable	0
Master/Slave	~		

Safety Notes

 - Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Always disconnect the product from the power source before cleaning or replacing the fuse
- Make sure the power cord is not crimped or damaged.



- If mounting the product overhead, always secure to a fastening device using a safety cable.
- Make sure there are no flammable materials close to the product while operating.
- Do not touch the product's housing when operating because it may be very hot.
- The product is not intended for permanent installation.
- Always make sure that the voltage of the outlet to which you are connecting the product is within the range stated on the decal or rear panel of the product.
- The product is for indoor use only! (IP20) To prevent risk of fire or shock, do not expose the product to rain or moisture.
- Always install the product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the product's housing are blocked.
- Never connect the product to a dimmer.
- Make sure to replace the fuse with another of the same type and rating.
- Never carry the product from the power cord or any moving part.
- The maximum ambient temperature (Ta) is 104 °F (40 °C). Do not operate the product at higher temperatures.
- In the event of a serious operating problem, stop using the product immediately.
- Never try to repair the product. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.

 



Keep this User Manual for future use. If you sell the product to someone else, be sure that they also receive this document.






2. INTRODUCTION Product Overview



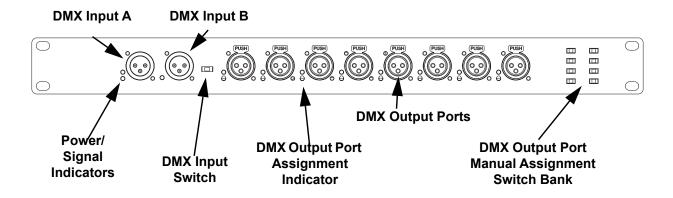



Product Dimensions

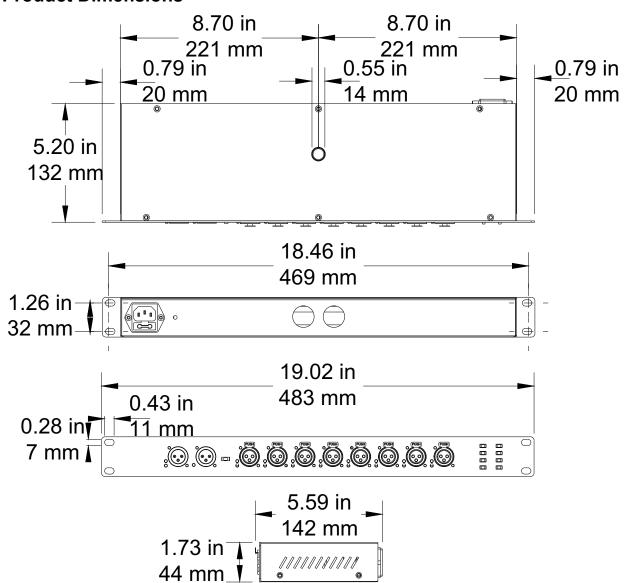



3. SETUP

AC Power

The Data Stream 8 has an auto-ranging power supply and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.




- Always connect the product to a protected circuit (circuit breaker or fuse).
 Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.
- To eliminate unnecessary wear and improve its lifespan, during periods of nonuse completely disconnect the product from power via breaker or by unplugging it.



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

Fuse Replacement

- 1. Wedge the tip of a flat-head screwdriver into the slot of the fuse holder.
- 2. Pry the fuse holder out of the housing.
- 3. Remove the blown fuse from the holder and replace with a fuse of the exact same type and rating.
- 4. Insert the fuse holder back in place and reconnect power.

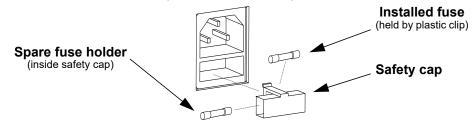



Disconnect the product from the power outlet before replacing the fuse.



Mounting


Before mounting the product, read and follow the safety recommendations indicated in the <u>Safety Notes</u>.

Orientation

The Data Stream 8 may be mounted in any position; however, make sure adequate ventilation is provided around the product.

Rigging

- Before deciding on a location for the product, always make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure onto which you are mounting the product can support the product's weight. See the <u>Technical Specifications</u> for weight information.
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.

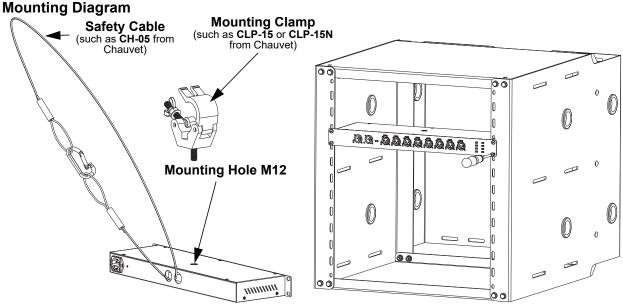



4. OPERATION

 
Front Panel Operation

The Data Stream 8 is designed to distribute / boost 2 incoming DMX signals (A/B) into 8 separate output ports. Each of the 8 output ports is electronically isolated from the others, and must be assigned to one of the incoming DMX signals.

To control where each of the signals go, there are assignment switches located on the front panel. Please refer to the <u>Product Overview</u> to see the Input Switch and DMX Output Port Manual Assignment Switch Bank

Configuration

The Data Stream 8 works with up to 2 DMX universes. Information about DMX is in the CHAUVET DMX Primer, which is available from the Chauvet website www.chauvetdj.com.



Power Indicator

The power indicator is located on the left side of the panel and will illuminate red when the product has power.

Signal Indicators

There are 2 signal indicators. Green indicates a signal from input A and Blue indicates a signal on input B.

DMX Input Ports

There are 2 DMX input ports A and B. Each port handles 1 universe of DMX.

Input Select Switch

This 3 way switch selects whether signal A is routed to all the output ports, signal B is routed to all the output ports or if it gets routed to the DMX Output Port Manual Assignment Switch Bank.

DMX Output Ports

These ports are labeled with a number and have both a green and a blue indicator lights which identify which DMX input signal the output port is assigned to.

DMX Output Port Manual Assignment Switch Bank

To use the DMX Output Port Manual Assignment Switch Bank., the Input Select Switch must be set to the Manual position in the center between A and B. Each switch on the DMX Output Port Manual Assignment Switch Bank has a number that corresponds with the numbers on each of the output ports. Each switch can choose which Input is assigned to each of the individual output ports.



5. MAINTENANCE

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean your lighting products at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
- Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
- 6. Softly drag any dirt or grime to the outside of the transparent surface.
- 7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.



6. TECHNICAL SPECIFICATIONS

Dimensions and Weight

LENGTH	WIDTH	HEIGHT	WEIGHT
19 in (483 mm)	5.2 in (132 mm)	1.7 in (44 mm)	4.6 lb (2.0 kg)

Note: Dimensions in inches rounded to the nearest hundredth.

Power

POWER SUPPLY TYPE	RANGE	VOLTAGE SELECTION
Switching (internal)	100 to 240 VAC, 50/60 Hz	Auto-ranging
PARAMETER	120 V, 60 Hz	230 V, 50 Hz
Consumption	2 W	2 W
Operating Current	0.04 A	0.3 A
Fuse	F 1 A, 250 V	F 1 A, 250 V
Power I/O	U.S./CANADA	Worldwide
Power input connector	IEC	IEC
Power output connector	Edison	IEC
Power Cord plug	Edison (U.S.)	Local Plug

Thermal

MAXIMUM EXTERNAL TEMPERATURE	COOLING SYSTEM	
104 °F (40 °C)	Convection	

DMX

I/O CONNECTOR
3-pin XLR

Ordering

PRODUCT NAME	ITEM CODE	UPC NUMBER
Data Stream 8	09111451	781462217990





RETURNS

In case you need to get support or return a product:

- If you are located in the U.S., contact Chauvet World Headquarters.
- If you are located in the UK or Ireland, contact Chauvet Europe Ltd.
- If you are located in Mexico, contact Chauvet Mexico.
- If you are located in Benelux, contact Chauvet Europe BVBA.
- If you are located in any other country, DO NOT contact Chauvet. Instead, contact your local distributor. See www.chauvetdj.com for distributors outside the U.S., UK, Ireland, Mexico, or Benelux.



If you are located outside the U.S., UK, Ireland, Mexico, or Benelux, contact your distributor of record and follow their instructions on how to return Chauvet products to them. Visit our website www.chauvetdi.com for contact details.

Call the corresponding Chauvet Technical Support office and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause for the return.

Send the merchandise prepaid, in its original box, and with its original packing and accessories. Chauvet will not issue call tags.

Clearly label the package with the RMA number. Chauvet will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Before sending the product, clearly write the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



CONTACT US

World Headquarters	
General Information	Technical Support
Address: 5200 NW 108th Ave.	Voice: (844) 393-7575
Sunrise, FL 33351	Fax: (954) 756-8015
Voice: (954) 577-4455	Email: chauvetlighting.com
Fax: (954) 929-5560	Website
Toll Free: (800) 762-1084	www.chauvetdj.com
EUROPE	
General Information	Technical Support
Address: Stokstraat 18	Email: eutech@chauvetlighting.eu
9770 Kruishoutem	Website
Belgium	www.chauvetdj.eu
Voice: +32 9 388 93 97	
General Information	Technical Support
	recimical Support
Address: Unit 1C	Email: uktech@chauvetlighting.com
	• •
Address: Unit 1C	• •
Address: Unit 1C Brookhill Road Industrial Estate	Email: uktech@chauvetlighting.com
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK	Email: uktech@chauvetlighting.com Website
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT	Email: uktech@chauvetlighting.com Website
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT Voice: +44 (0) 1773 511115	Email: uktech@chauvetlighting.com Website
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: uktech@chauvetlighting.com Website
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: uktech@chauvetlighting.com Website www.chauvetdj.eu
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110 MEXICO General Information	Website www.chauvetdj.eu Technical Support
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110 MEXICO General Information Address: Av. de las Partidas 34, 3-B	Website www.chauvetdj.eu Technical Support
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110 MEXICO General Information Address: Av. de las Partidas 34, 3-B (Entrance by Calle 2)	Email: uktech@chauvetlighting.com Website www.chauvetdj.eu Technical Support

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., United Kingdom, Ireland, Mexico or Benelux, contact the dealer of record.